
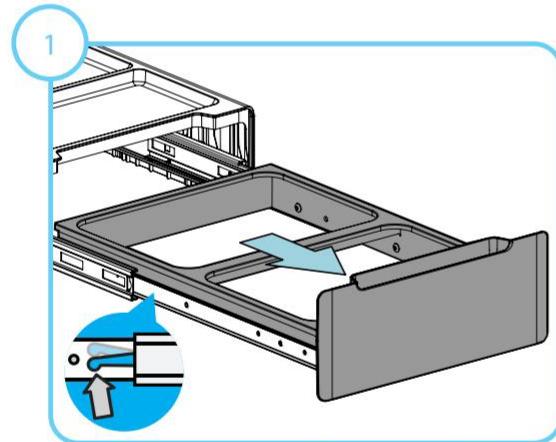
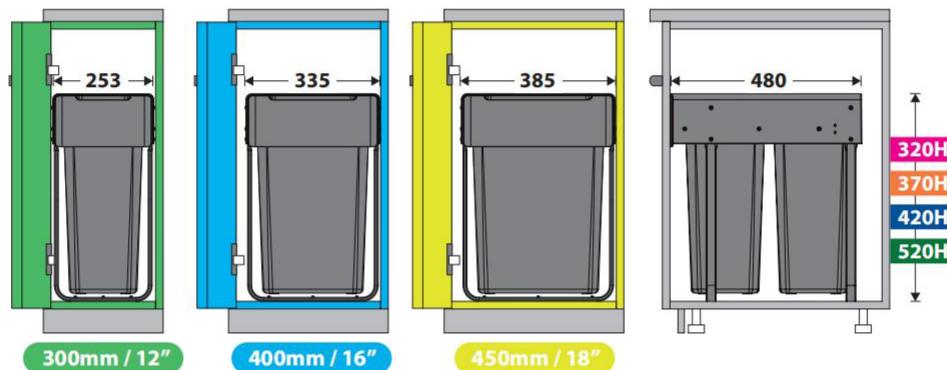



Hinge Door Type

Step 4


x6
M4x25

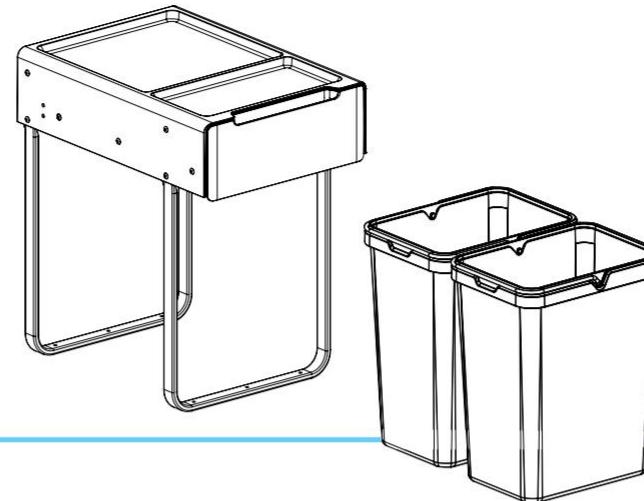

Separate runners from assembly using runner clips

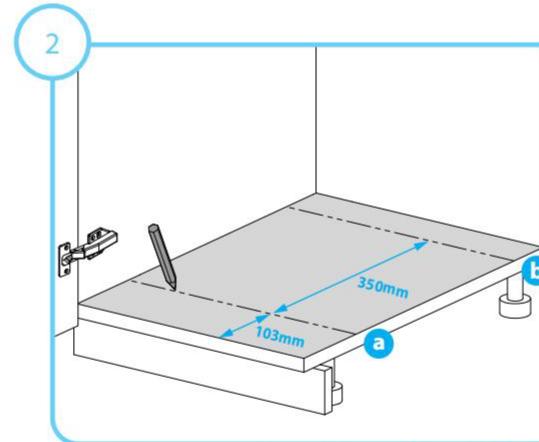

Measure and mark lines **a** and **b**

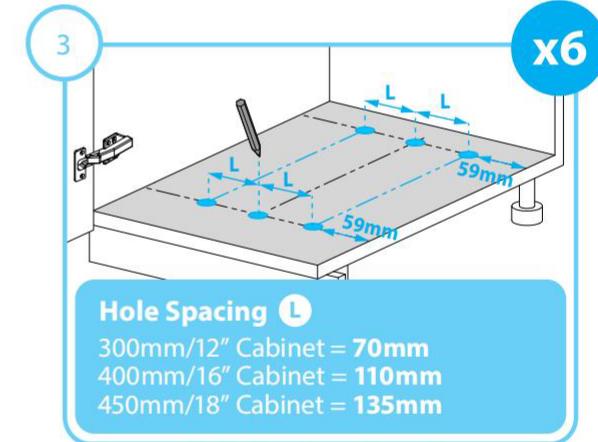


Hole Spacing **L**

300mm/12" Cabinet = 70mm


400mm/16" Cabinet = 110mm

450mm/18" Cabinet = 135mm


Measure the holes from the side opposite the door hinges. Drill holes in the bottom of the cabinet.

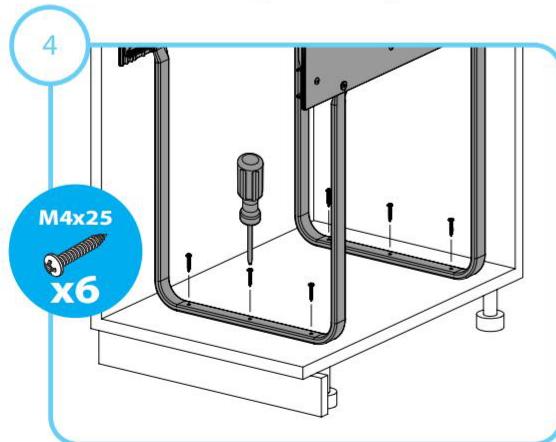

Screw brackets to bottom of cabinet

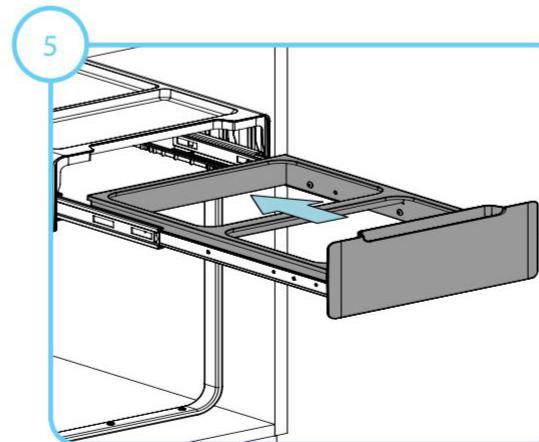

Slide the tray into runners, it should make a click sound

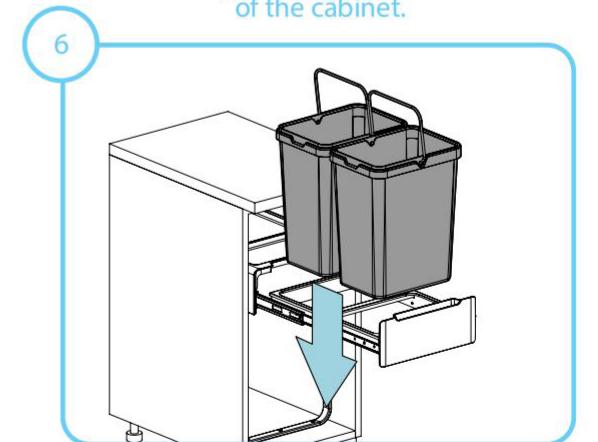

Install Bins